


Valcom V-9972 Connection Guide with Valcom V-2006A / V-2006AHF

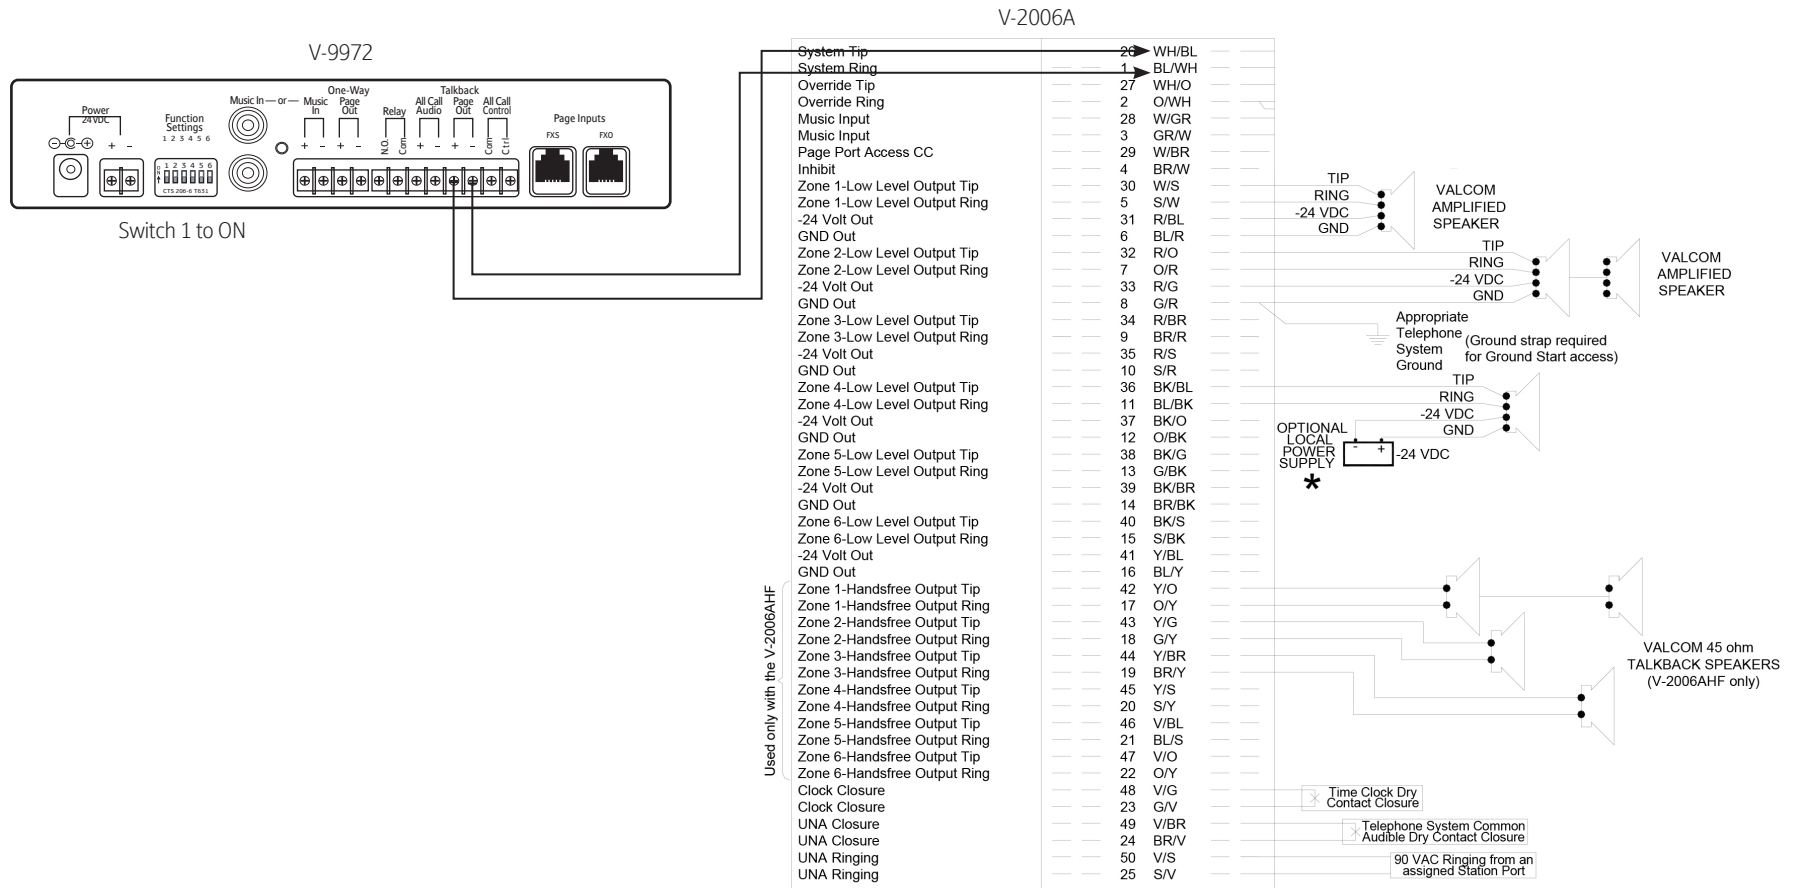

Set V-2006A / V-2006AHF Battery Feed Switch (SW6) to ON.